


## Sectional Door Framing Instructions


**Note:** With ongoing product developments, the manufacturer retains the right to change products and specifications without prior notification. If a specification is critical to the end use, please discuss with your Dominator Dealer first. Illustrations are not accurate representations of product, and are for illustrative purposes only. All measurements should be made by your Dominator Dealer for clarification.

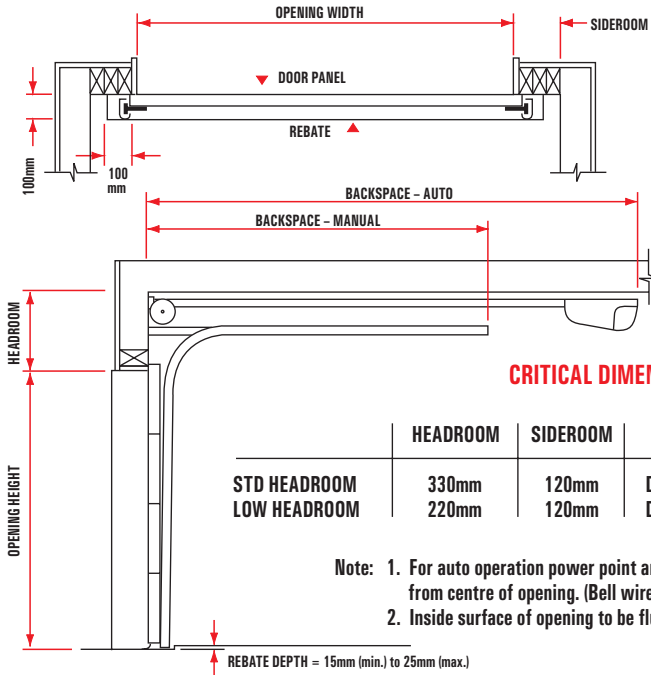


### CRITICAL DIMENSIONS

	BACKSPACE (MINIMUM)			
	HEADROOM	SIDEROOM	MANUAL	AUTO
STD HEADROOM	330mm	120mm	DOOR HEIGHT + 150mm	DOOR HEIGHT + 1.0m
LOW HEADROOM	220mm	120mm	DOOR HEIGHT + 150mm	DOOR HEIGHT + 1.0m

- Note:** 1. For auto operation power point and bell wire (if required) to be fitted 3.5m back from centre of opening. (Bell wire to be run near to access door.)  
 2. Inside surface of opening to be flush to enable door fittings to be fixed correctly.

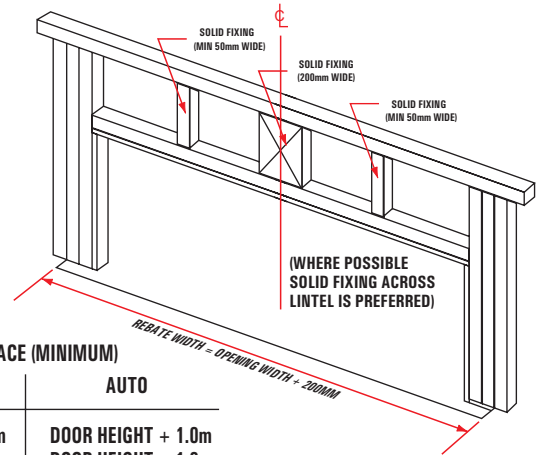


### NOGGING DETAIL FOR SECTIONAL UP TO 2.3M HIGH (TRACK AND MOTOR FIXINGS)

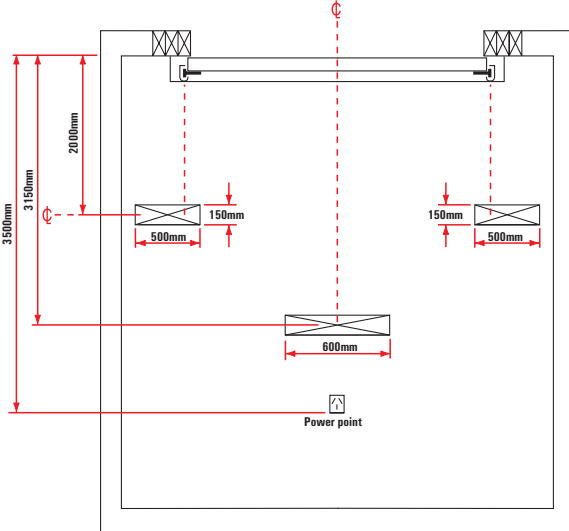

**Note:** The details shown are for 2.3m Maximum height Sectional Door with Standard 330mm Headroom. Also for Intermediate Headroom of 220mm with springing to front.

### NOGGING DETAIL FOR SECTIONAL 2.35 – 3.35M HIGH (TRACK AND MOTOR FIXINGS)

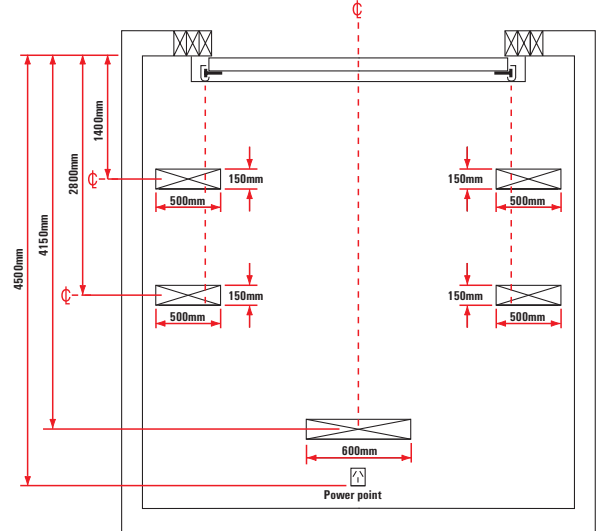

**Note:** The details shown are for 3.35m Maximum height Sectional Door with Standard 330mm Headroom. Also for Intermediate Headroom of 220mm with springing to front. Measurements for motor with 1m extension.